




Plinth installation for a single Hygipod system

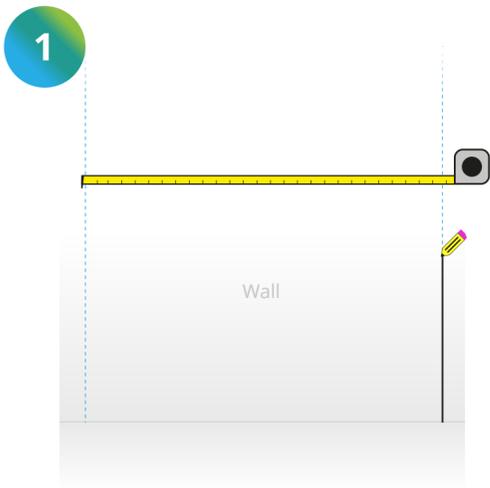

1 Determine the location of the Hygipod and accurately mark the width of the unit onto the wall.

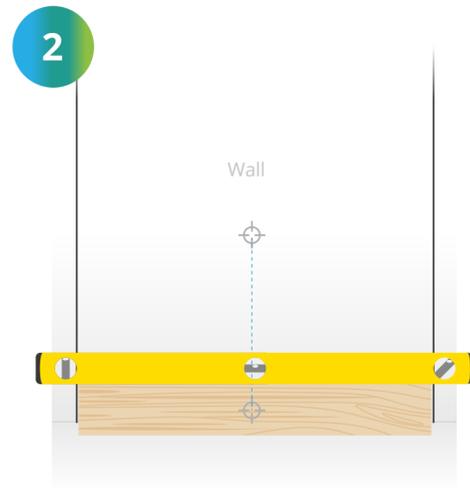


2 Position the plinth centred to the markings. Ensuring it is level.

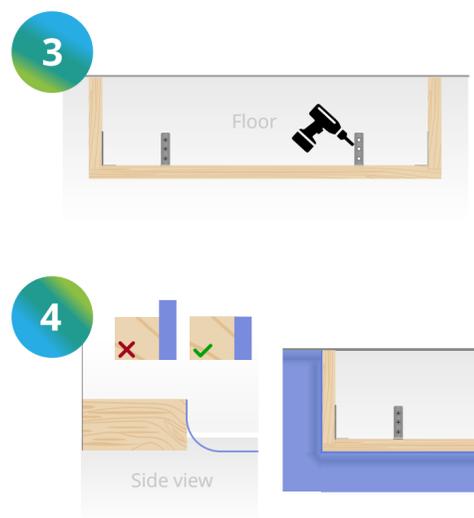


3 Fix the plinth to the floor and wall using the supplied brackets.

4 Install vinyl flooring up to the top of the plinth.


Plinth installation for multiple Hygipod systems

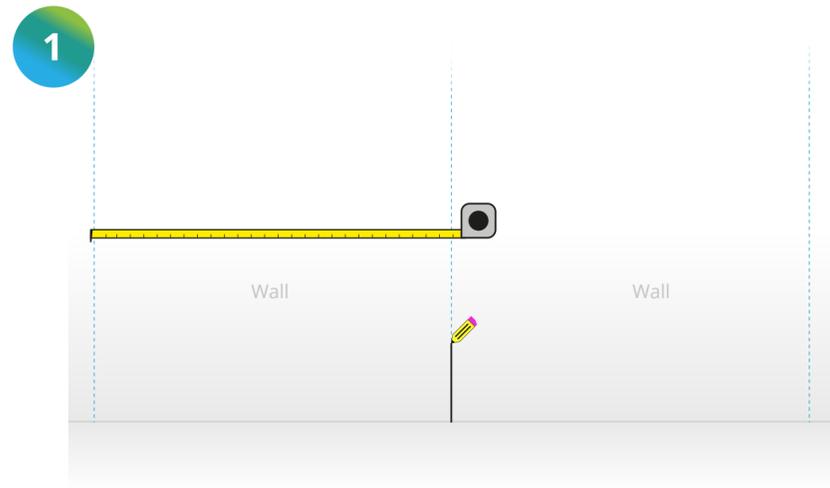

1 Determine the location of the Hygipods and accurately mark the width of the units onto the wall.

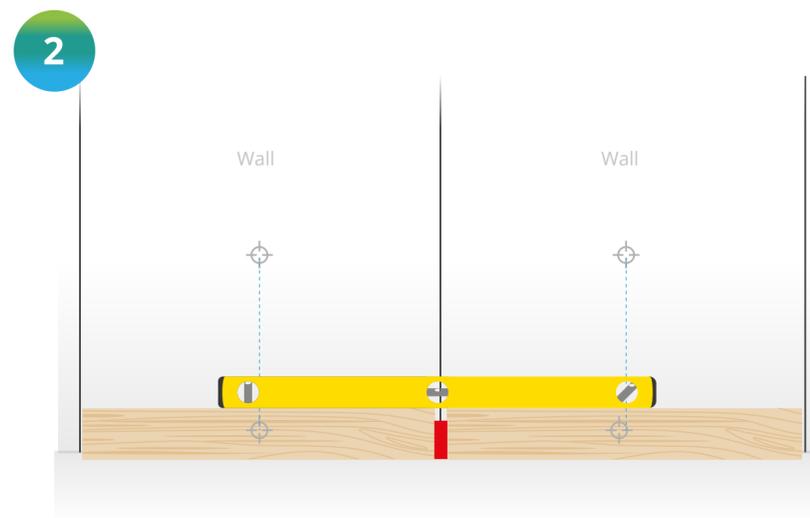

2 Position the first plinth centred to the first set of markings, then place a 15mm packer between the subsequent plinth.

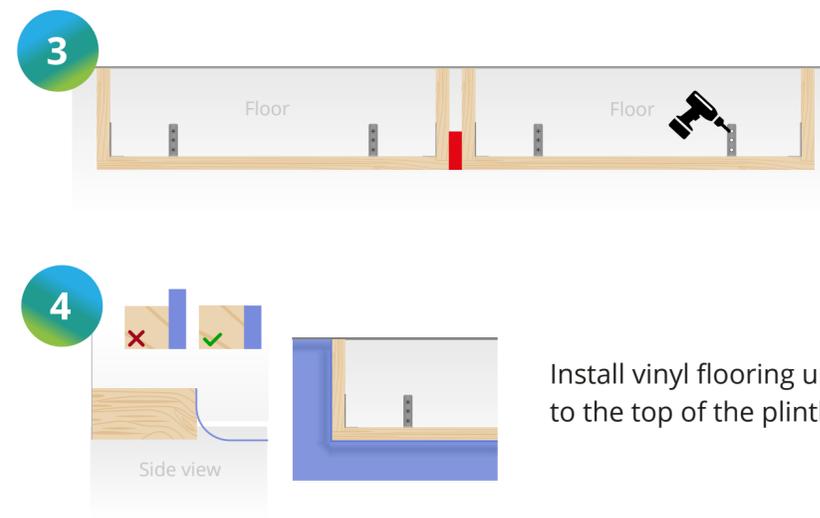

3 Fix the plinths to the floor and wall using the supplied brackets.

4 Install vinyl flooring up to the top of the plinths.